HINTS AND TIPS			
When prompted, press # as you enter the system, so that the system will recognize you as a subscriber.			
Press star 🔹 to cancel a selection, back up, or disconnect.			
◆ Press 0 if you need help.			
REVIEWING MESSAGES			
<ul> <li>Messages are heard in this order: Home, Urgent, Non-urgent, Skipped, Archived.</li> </ul>			
◆ At the Main Menu, 1 - 1 plays new, unheard messages.			
◆ During Review, 3 - 3 jumps to end of message.			
◆ # skips one message.			
◆ #- #skips to archived messages.			
SENDING MESSAGES			
◆ To review your message before sending, press 1.			
When sending a message across your voice messaging network (e.g. AMIS) to another system, use both the ID (access number) of the voice mail system you want to reach and the recipient's mail box number.			
• Recording controls allow you to edit a message.			
Personal Options			
Guest mailbox users and Home mailbox users pick up and send messages by pressing $\boxed{\#}$ , then entering your mailbox number and their special password.			
PROMPT LEVELS			
You may choose from three prompt levels: Standard, Extended, or Rapid by selecting Main Menu, Administrative Options and then Prompt Levels.			
<ul> <li>Standard prompts (preset in the new mailboxes) prompt for Review and Send options at the Main Menu.</li> </ul>			
Extended Prompts include prompts for all Main Menu options.			
Rapid prompts briefly prompt for all Main Menu options.			

DIRECTORY			
The system access p	hone number	:	
Your mailbox numb	er :		
OTHER MAILBOX	x		
NUMBERS			
Guest 1:	91		
Guest 2:	92		
Home:	93		
			-
			-
			-
			-
			-
			-
GROUP LISTS			

The functionality described in this brochure is subject to change without notice.

© Alcatel Internetworking 2000. All rights reserved.

3BA19580 USAA Ed. 02

## Alcatel 4635 Quick Reference Guide

